



- Gray** - Connect to the positive (+) front right speaker output of the source unit
- Gray/Black** - Connect to the negative (-) front right speaker output of the source unit*
- White** - Connect to the positive (+) front left speaker output of the source unit
- White/Black** - Connect to the negative (-) front left speaker output of the source unit*
- Green** - Connect to the positive (+) rear right speaker output of the source unit
- Green/Black** - Connect to the negative (-) rear right speaker output of the source unit*
- Purple** - Connect to the positive (+) rear left speaker output of the source unit
- Purple/Black** - Connect to the negative (-) rear left speaker output of the source unit*
- Red** - Connect to constant +12V; **Black** - Connect to ground
- Blue** - Connect to remote turn-on for amplifier;
- RCA Connector** - Connect with amplifier. The RCA outputs feature a 6:1 step down with adjustable level controls for system optimization.

*If there is only one negative speaker wire, connect both of the negative LOC4 speaker wires to it (gray/black & white/black).

**The brown ground wire should only be used if no sound is audible on both channels.

