


● 面板控件和功能

- 1: 返回键
- 2: 下一曲/向下翻键
- 3: 上一曲/向上翻键
- 4: 菜单键
- 5: USB-A 接口
- 6: 彩屏显示区
- 7: 音量/播放/暂停/确认/ 选择键

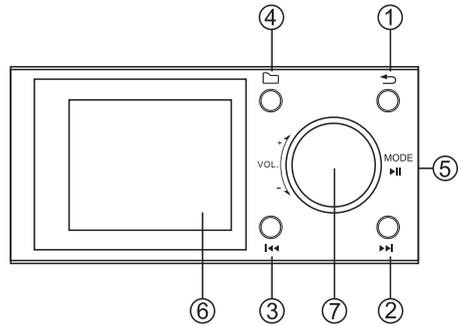

● 操作简介 (产品可能部分功能有所差异, 请参照实际功能为主)

长按主旋钮进入DSP设置界面

- 音效选择 → 6种音效模式
 - 音源选择 →
 - 超低音量
- | | |
|---|--------------------------------------------------------------------------------------------------------------|
| } | <ul style="list-style-type: none"> CD 蓝牙 OPT U盘 (播放器) AUX |
|---|--------------------------------------------------------------------------------------------------------------|



注意:

- 1: 选择音源时, 如果此音源无信号输入, 则需手动切换至其它音源;
- 2: 蓝牙模式时, 只能控制上一曲, 下一曲以及音量调节, 不能控制播放与暂停。
- 3: CD\OPT\AUX音源播放时, 只能音量调节, 不能控制上一曲, 下一曲, 以及控制播放与暂停。
- 4: 只有当U盘音源播放时, 能控制全部功能, 上一曲, 下一曲, 音量调节, 播放与暂停。

● 短按主旋钮: 播放/暂停和确定, 旋转主旋钮: 调节音量大小和列表内容上下滑动

- ☐ 短按: 进入文件夹(播放列表);若在播放列表,短按返回键切换回播放界面 (仅U盘模式下)
- ⏮ 短按: 切换上一曲(列表内容上滑)
- ⏭ 短按: 切换下一曲(列表内容下滑)
- ↶ 短按: 返回


● 使用建议:

- 为了更好的操作体验建议使用正规品牌的U盘, USB2.0及以上版本。
- 建议U盘格式化后再存放文件及歌曲, 格式可以FAT32和 EXFAT; U盘内不要放置其它不支持的文件, 例如EXE文件和 图片文件。
- 建文件数量在150个以内, 单个文件内的歌曲在50首以内。

* 本线控可以对来自本机USB接口上的存储设备曲目进行完全控制, 其他音源只能控制其音量。

● Panel Controls

1. Return
2. Next/Scroll Down
3. Last/Scroll Up
4. Menu
5. USB-A
6. Screen Display
7. Volume/Play/Pause/Confirm/Select Master Knob

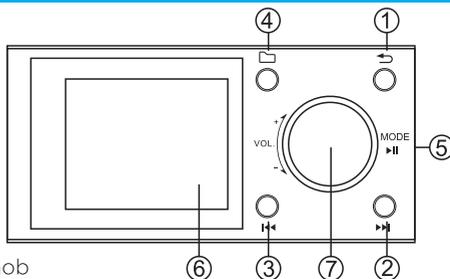

● Operation

Products may have different functions due to software update. Please refer to the latest actual products.

Long press the master knob to enter into Setting page.

- DSP Settings Selection → 6 Settings Modes
- Source Selection →
 - CD
 - Bluetooth
 - OPT
 - USB Disk
 - AUX
- Bass Level Adjustment



Note: Regarding to audio source selection, if there is no signal for the source selected, the DRC will automatically switch to the next audio source.

● Short press the master knob to play and pause music.

Rotate the master knob to adjust volume, or scroll up & down the list.

- 📁 SHORT PRESS: Enter the folder (playlist); If in the playlist, short press to return the playback screen
- ⏮ SHORT PRESS: Track Backwards (Scroll Up)
- ⏭ SHORT PRESS: Track Forwards (Scroll Down)
- ↶ SHORT PRESS: Return

● SUGGESTIONS

- For better operation experience, high quality USB 2.0 drivers are highly suggested.
- It is recommended to format the USB flash driver before saving song files. Please save the song files in FAT32 and EXFAT formats. Do not save other unsupported files on the USB flash driver, such as .EXE and image files.
- It is highly suggested that the total number of saved folders should be less than 150pcs, and the total songs in each folder should be no more than 50pcs.

* Only USB flash driver's music source can be fully controlled, such as Volume, Track, Play & Pause.

* Other music sources can be controlled with volume only, such as Bluetooth, CD, Auxiliary and Optical.