


ECHO PRO MIDRANGE SPEAKER

RECOIL[®]

HM65.4/HM65.4NEO

6.5" MIDRANGE SPEAKER, 4 OHM

 USER MANUAL

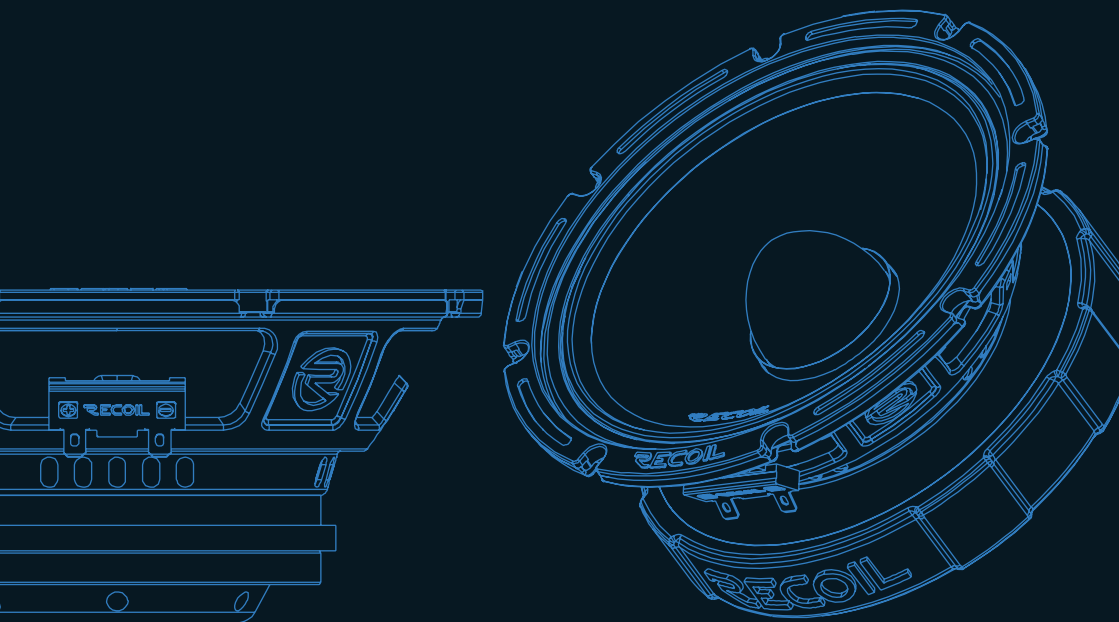

RECOIL

WWW.RECOILAUDIO.COM

Copyright ©2025 Recoil Audio

INSTALLATION

Congratulations on your purchase of our product! We hope RECOIL AUDIO will delight you with its impressive performance. In producing our speakers, we utilize high-quality components and cutting-edge materials. This manual contains essential instructions for proper system installation and use. Before installation, please carefully review all guidelines provided. Failure to follow these instructions may result in product damage or unintended malfunctions.

PRECAUTIONS

Prolonged exposure to sound pressure levels of 100 dB and higher can cause hearing loss. Use common sense and practice safe sound. Remember that prolonged exposure to excessively high sound levels can damage your hearing. Driving safety comes first.

The manufacturer is not responsible for hearing loss, physical injury or property damage due to misuse of this product.

ATTENTION!

Proceed with installation only if you are a qualified car audio installer, otherwise contact a professional installation service.

- Always wear safety glasses when using tools.
- Before proceeding with the installation, turn off the car head unit and other electronic devices.
- Disconnect the negative (-) terminal from the car battery before starting the installation.
- Store the loudspeaker in its packaging if you have not proceeded to install it, and always place the loudspeaker with the cone facing up. Never use force when installing speakers.
- Determine the location of the fuel lines, brake pipes, oil lines, and vehicle electrical wiring before proceeding with the installation.
- Check that the installation site has sufficient air exchange on both sides of the speakers before drilling holes.
- Check that nothing interferes with the normal operation of the cone, otherwise the cone will be damaged.
- Use a utility knife to cut off excess pieces of fabric near the hole where the speaker will be installed before starting drilling.
- Use a grommet for the speaker wires (not included) when pulling through sheet metal, otherwise the wire may be damaged by the metal edges of the hole.

PRECAUTIONS

Speakers - 1 PAIR

Adapter Spacer Rings - 1 PAIR

Instruction Manual - 1 PC

Mounting Screw Kit - 4 PAIRS

INSTALLATION

To install the speakers, the help of a professional installation service is required. In this manual, only the basic rules for connecting the speakers and technical specifications are presented.

SELECTING SPEAKER LOCATION

The choice of where the speaker will be installed has the greatest influence on sound quality. You need to think carefully about where the speaker system will be installed. Places for installing speakers should be of sufficient size.

It is necessary to check that, due to the chosen installation locations of the speakers, there is no interference in the operation of the mechanical parts and electronics of the car.

PREPARING TOOLS

Note: You may need the tools listed below

 
- Electric Drill + Drills
- Hacksaw, Electric metal hacksaw
- Standard Set of Screwdrivers
- Stripping Pliers
- Crimping tool and Needle-nose Pliers
- Silicone Sealant (for Acoustic Enclosure), Sealing gasket / foam ring (for Speakers)

INSTALLATION IN THE DOOR

Before proceeding with the installation of speakers in the car door, Please check its construction and window operation. There is a stabilizing stop bar in the car door, which is located between the door and the door arch. The check strap / door check strap prevents the door from being opened unnecessarily.

INSTALLATION IN THE REAR OF THE VEHICLE

Before installing the speakers in the rear part of the vehicle, Please check the operation of the trunk lid hinges and lift supports (or gas struts). Ensure there is enough clearance for the speaker, as these components move when the trunk is opened. Do not install the speakers too close to the rear window, other wise it will have to be removed when you screw in the screws.

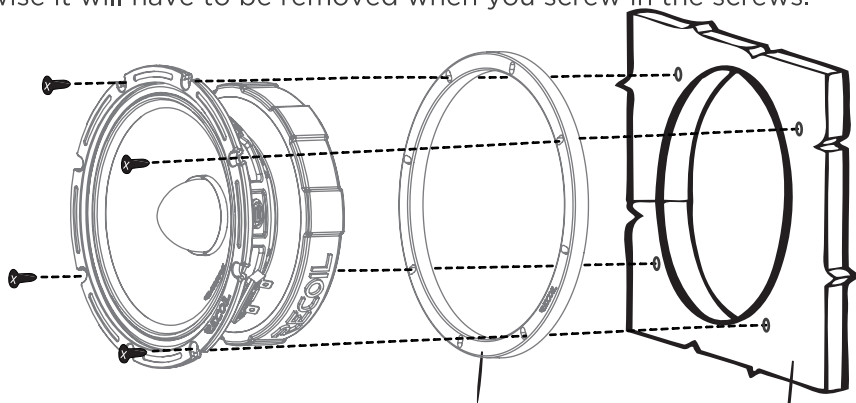

If the factory mounting holes are too small, use the included adapter spacer rings for proper fitment.

Mounting surface
Installation surface should be flat

INSTALLATION

1. Choose a place to install the speaker. Make sure the mounting surface is flat and fits the mounting dimensions of the speaker. Placing the speaker on an uneven surface will damage the speaker.
2. Make sure that the chosen location for the speaker does not interfere with the operation of the vehicle,
3. Cut a template based on the speaker's outer diameter. Place the template on the mounting surface where the speaker should be installed and trace around it with a pencil.
4. Make a hole for the speaker. The hole can be made either with metal shears or with an electric hacksaw for metal.
5. The speaker wire (not included) needs to be connected to the speaker. Use a grommet for the speaker wire when pulling through sheet metal, otherwise the wire may be damaged by the metal edges of the hole.
6. Drill mounting holes with a 1/8" (3mm) drill bit.
7. Pull the speaker wire through the hole made and connect to the speaker. Observe the polarity when connecting the speakers.
8. Secure the speaker with screws.



RECOMMENDED CROSSOVER SETTINGS

For optimum performance, it is recommended to adjust the crossover according to the recommendations below.



NOTE: Crossover settings depend on speaker sizes.

Recommended active crossover settings: 90Hz - 20kHz, 12dB/octave.

  
HM65.4

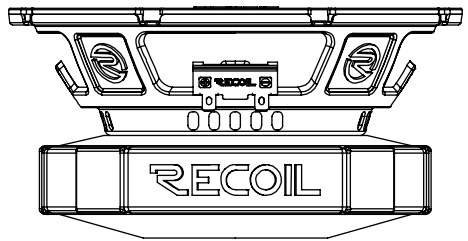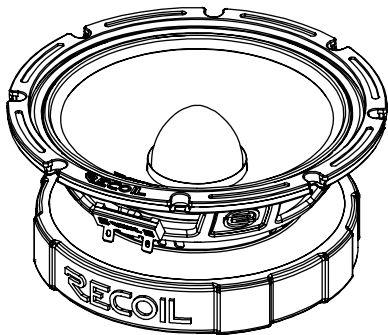

HM65.4NEO

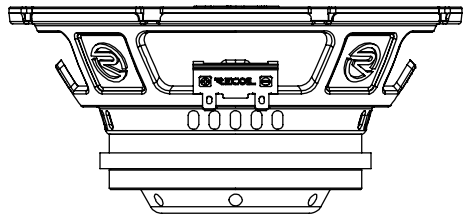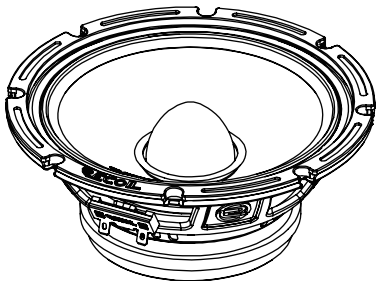  



DIMENSIONS

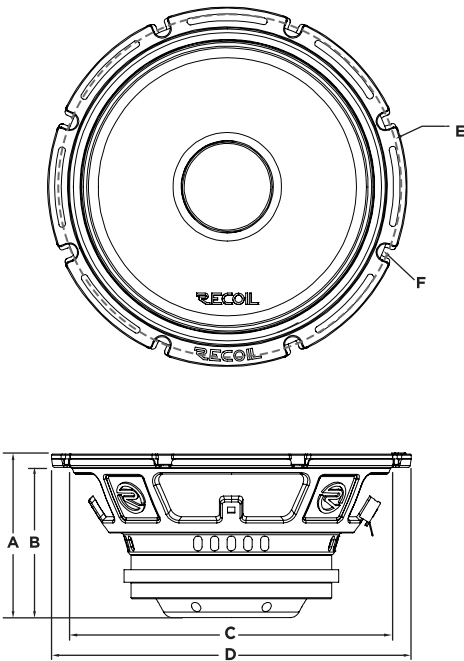 

| Model | HM65.4 | HM65.4NEO |
|-------|--------|-----------|
| A | 87.3 | 78.3 |
| B | 81 | 72 |
| C | 154.5 | 154.5 |
| D | 172.5 | 172.5 |
| E | 164 | 164 |
| F | 8xØ4.6 | 8xØ4.6 |

Dimensions (mm)

  INSTALLATION CUTOUTS

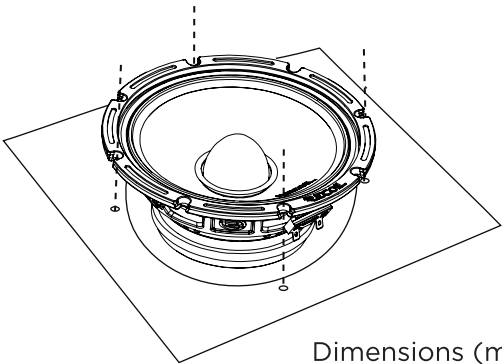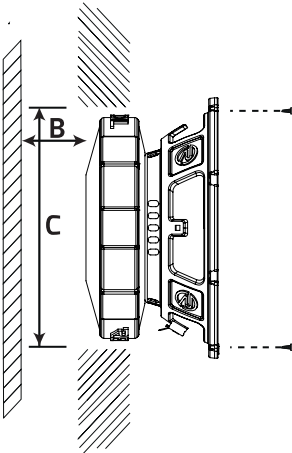

Dimensions (mm)

| Installation dimensions | | |
|-------------------------|--------|-----------|
| Model | HM65.4 | HM65.4NEO |
| C | 154.5 | 154.5 |
| B | 81 | 72 |

SPECIFICATIONS

| | HM65.4 | HM65.4NEO |
|--------------------------|----------------------|----------------------|
| Configuration | 6.5"Midrange Speaker | 6.5"Midrange Speaker |
| Power Handling (RMS) | 200W | 200W |
| Max Power | 400W | 400W |
| Nominal Impedance (Ohms) | 4Ω | 4 Ω |
| Minimum Impedance (Ohms) | 3 Ω | 3 Ω |
| Mounting Depth | 81mm (3.2") | 72mm (2.83") |
| Mounting Diameter | 154.5mm (6.08") | 154.5mm (6.08") |
| Sensitivity (1W/1m) | 93.6dB (+/-3dB) | 96dB (+/-3dB) |
| Frequency Range | 90-5000Hz | 92-5000Hz |
| Cone Material | Carbon Fiber | Carbon Fiber |
| Suspension Material | Fabric | Fabric |
| Voice Coil Diameter | 44mm (1.73") | 44mm (1.73") |
| Coil Material | KSV | KSV |
| Voice Coil Height | 8.0mm (0.31") | 8.0mm (0.31") |
| Magnet Material | Ferrite | Neodymium |
| Magnet Size / Weight | 140x50x20mm/(47oz) | 103x50x6mm/(10.1oz)) |

THIELE- SMALL PA PARAMETERS

HM65.4

Fs: 90Hz
Re: 3.0 Ω
Qes: 0.48
Qms: 10.15
Qts: 0.46
Vas: 9.8 L/0.35FT³
Sd :153.9 cm²
X max:0.5mm
Mms: 10.5 g
Bl: 6.1 T·m

HM65.4NEO

Fs: 92Hz
Re: 3.0 Ω
Qes: 0.3
Qms: 8.28
Qts: 0.29
Vas: 9.8 L/0.35FT³
Sd: 153.9 cm²
X max: 0.5mm
Mms: 10g
Bl: 7.6 T·m

ECHO PRO MIDRANGE SPEAKER



WWW.RECOILAUDIO.COM

COPYRIGHT© 2025 RECOIL ALL RIGHTS RESERVED. RECOIL,
NINGBO AVS TECHNOLOGY CO., LTD AND DOMESTIC INVESTMENT
GROUP, LLC ASSUME NO RESPONSIBILITY OR LIABILITY FOR
FINES OR DAMAGES INCURRED AS A RESULT OF IMPROPER USE
OF THIS PRODUCT.

封面封底为250g铜板纸，黑底白字，蓝色线条为UV黑亮效果，无需印蓝色。



UV

其它页面110g铜板纸