


Introduction

The TRI emulates a parking brake signal for use in RV's, off road vehicles, and exhibition vehicles.

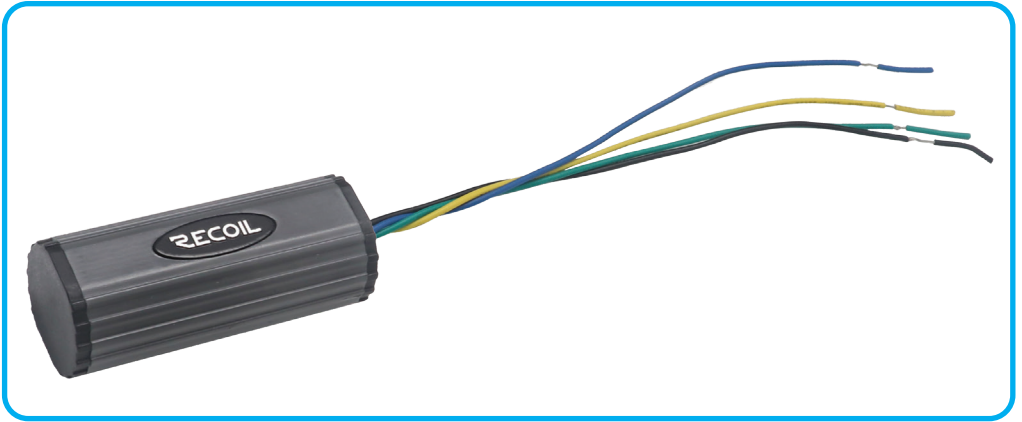

Connections to be made

Wiring the TRI:

1. Connect the **Black** wire to chassis ground.
2. Connect the **Blue** wire to the aftermarket radios amplifier turn-on wire.
3. Connect the **Green** wire to the parking brake wire of the aftermarket radio.
4. Connect the **Yellow** wire to the foot brake wire of the aftermarket radio (Alpine only).

Attention!

This product is meant to be used in RV's, off road vehicles, and exhibition vehicles only. other applications are illegal.

CAUTION!

All accessories, switches, climate controls panels, and especially air bag indicator lights must be connected before cycling the ignition. Also, do not remove the factory radio with the key in the on position, or while the vehicle is running.