



# RECOIL SINGLE COLOR ROCK LIGHT PODS INSTALLATION GUIDE


## COMPONENTS

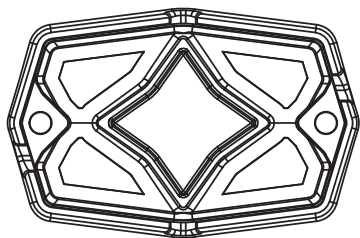

**Recoil Rock Light Pod**

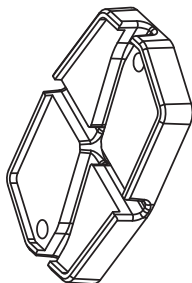


**Flat Rubber Pad**

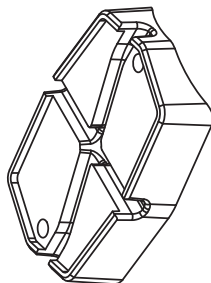

**Roll Bar Rubber Pad**



**Stainless Steel Screws for Pod**

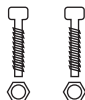

**Stainless Steel Screws for Pod**



**Wire Tie**

## INSTALLTION

- 1.Designate your mounting locations for each Rock Light Pod and the control box. (Refer to page 2 for recommended mounting locations) Avoid hot surfaces and/or moving parts.
- 2.Use a pen to mark the holes where you want to mount the Rock Light Pods. Then, drill a hole(s) for the wire connector to pass through.
- 3.Secure the Rock Light Pods using the included screws. (If mounting on a rounded or uneven surface, utilize the roll bar rubber mounting pads. )
- 4.Caution: Rock Light Pods become extremely hot during use - keep away from any vehicle parts that may be damaged by exposure to high temperatures.

